



1 Fitting the stand

TV panel must be facing downwards. For the stand installation, there is one type of screw provided as shown below.

To complete the stand installation you will require a cross head screw driver. Place the TV set on a flat and clean surface with the panel facing downwards to avoid damage.

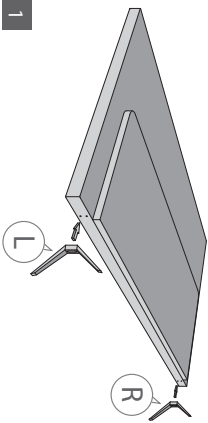


Place the TV set on a flat and clean surface with the panel facing downwards to avoid damage.

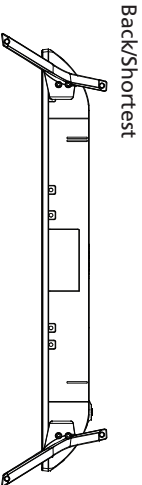


Back/Shortest
Front/Longest

When the stand feet are installed correctly the stand feet will be longest at the front of the TV and shortest at the back with the feet pointing away from each other.

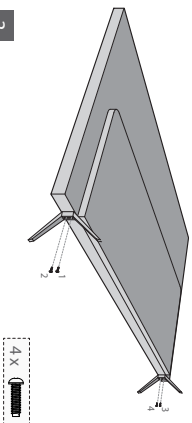

When the stand/feet are in the correct position, secure the feet to the underside of the TV set using 4 screws provided.

2 Connecting your set

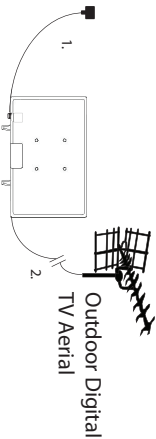


1) Connect the TV to your power socket.

2) If you wish to use the TV to receive Freeview/Saorview channels, connect the RF input from the TV to your outdoor Digital TV aerial. If you do not wish to receive Freeview/Saorview, skip this step.


3 Powering On the TV

TV Control Stick

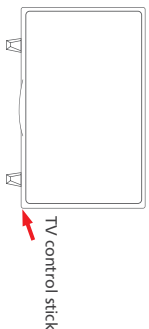

Switch on the television by pressing the TV control stick located on the TV set.


Remote Control: Installing Batteries

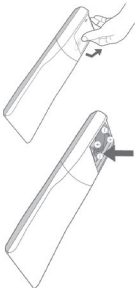

Insert the batteries supplied into the remote control and press the standby button to power on the TV.

4 First time installation

Basic installation steps are shown below. These may vary slightly depending on model.

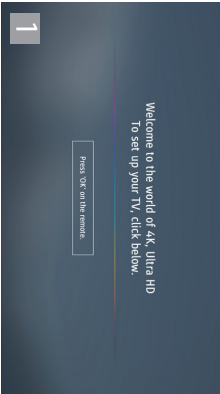

Introduction


When the set first turns on, it enters the First Time Installation mode. This can be restarted by restoring the set to default settings in the 'About TV' Menu.

Note: In home mode, the TV will switch off automatically after 4 hours in the event that no buttons are pressed on the TV or remote control. (You can change this by pressing the [MENU] button and then selecting Settings>Time>Auto Standby)



Environment of Use

Home Mode: For normal use, by default it is set to a power saving mode which reduces the energy used by up to 25% (by reducing the power to the LED/LCD panel). This can be changed in the picture mode settings.

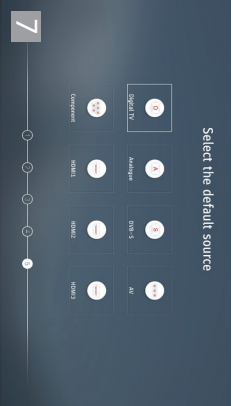

Default Source


Select the source which you use the most. If Digital TV (Freeview) is chosen, then at the next step, the set will tune in and default to Digital TV (Freeview). If one of the other sources is selected, then the set will not tune in at this stage and default to that input. If it is required to tune the set in later, press the [MENU] button and then select Settings>Channels

Basic installation steps are shown below. These may vary slightly depending on model.




Languages

Select your preferred on-screen display language. This will change the language in which the menus and associated information is displayed in. When set up has been completed, to change this press the [MENU] button and then select Settings > System Menu > Language

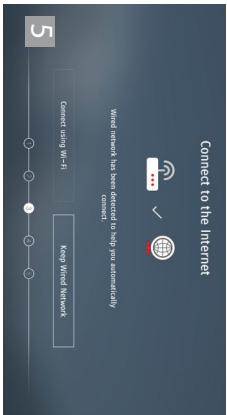

Network setup


You can connect the TV to your broadband router or wireless network in order to take advantage of the Smart functions. If you connect the TV to your router using an Ethernet cable (recommended) this step will be skipped.

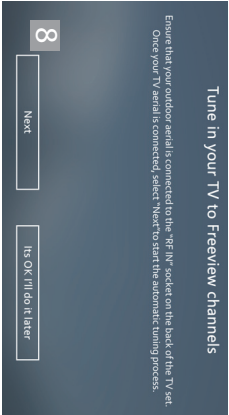

Tune in Channels

Choose to install terrestrial channels now or later.


Wall Mounting the TV

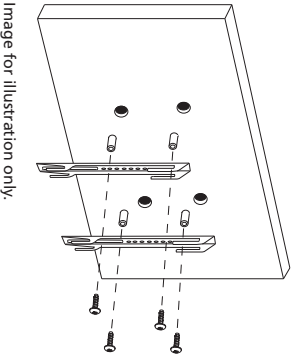

1. Remove the four screws that are supplied in the wall mounting holes.
2. The wall mount can now be easily attached to the mounting holes on the rear of the TV.
3. Install the wall mounting bracket to the television as advised by the bracket manufacturer.

The picture shows the use of spacers, which are not applicable to all sets/installations.

Connectivity

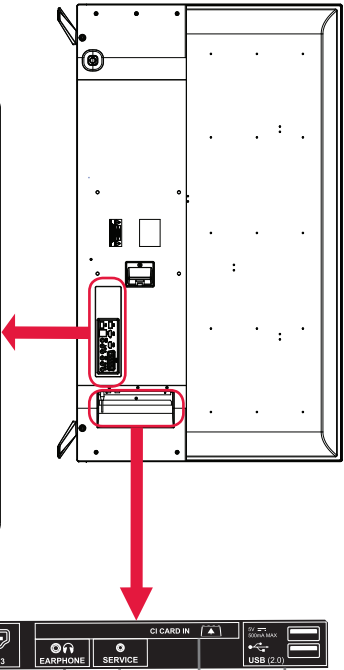

A	Ethernet/LAN*	Network connection	H	SAT In	Satellite input
B	Digital Audio	Digital Optical Audio Output	I	RF in	RF / TV aerial input
C	HDMI 1	HDMI Input	J	HDMI 3	HDMI input
D	HDMI 2	HDMI Input (ARC)	K	Earphones	Earphone input
E	LR	Audio shared by Video/Composite and component/Y/PrPz	L	Service Input	Input is used only by service centres
F	Video/Y/PrPz	Video input (green) and HD input (YpBp)	M	CI card in	Common interface module
G	SCART	SCART input	N	USB 2.0	USB port 2.0

* The Ethernet/LAN port is used for Freeview HD services and smart functions.

Win a

SHARP Soundbar

Register your manufacturers guarantee online within 14 days of purchase at www.registertoday.co.uk/sharp and enter into a prize draw to win a Sharp Soundbar

Terms and conditions apply. Online registration only.

