



Technical Specification

	32EE2I 32EE3I 32EE4I 32EE5I 32EE6I 32EE7I	32EE2ID
Energy Efficiency Class (SDR)	E	
Power consumption (SDR)	25 W	
Screen resolution (pixels)	1366 x 768	
Screen Size (diagonal)	81 cm / 32 inches	
RF	75 ohm Antenna / Analog / DVB / Satellite	
Inputs	3 x HDMI • 2 x USB • 1 x Micro SD card slot • 1 x RJ45 LAN/Ethernet 1 x Composite/CVBS Video & Component/YPbPr Input 1 x L/R Audio input for Composite/CVBS & Component/YPbPr	
Sound Outputs	1 x Digital Optical Audio output, 1 x 3.5mm Headphone	
Speaker*/ Amplifier Watts (RMS)	2 x 10 / 2 x 8	
Voltage and power consumption	AC 220V ~ 240V; 50Hz 25/40/65W (home mode/standard/max) (<0.5W in Standby)	AC 220V ~ 240V; 50Hz 25/40/75W (home mode/standard/max) (<0.5W in Standby)
Dimensions including stand (mm)	730W x 468H x 173D	
Net weight (Kgs)	4.6	4.8
Wall Mounting	VESA 200 x 100 (mm)	

*Built-in **Harman Kardon** speaker systems (Full-range speaker and tweeter).

SOUND SYSTEM BY
harman/kardon

Harman Kardon is trademark of HARMAN International Industries, Incorporated, registered in the United States and/or other countries.

HDMI
HIGH DEFINITION MULTIMEDIA INTERFACE

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Dolby Audio

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

DTS HD

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS, Inc. (for companies headquartered in the U.S./Japan/Taiwan) or under license from DTS Licensing Limited (for all other companies). DTS, DTS-HD Master Audio, DTS-HD, VirtualX, and the DTS-HD logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2021 DTS, Inc. ALL RIGHTS RESERVED.

SHARP

Quick Start Set Up Guide

For information on using the TV's features, please refer to the Operating Instructions. (Available online to download.)

Model Numbers

32EE2I 32EE2ID
32EE3I
32EE4I
32EE5I
32EE6I
32EE7I

Register your manufacturers guarantee
online within 14 days of purchase at
www.registertoday.co.uk/sharp
and enter into a prize draw to...

Win a
SHARP
Soundbar

Terms and conditions apply. Online registration only.

Quick & easy guide for setting up your TV

What is included in the box

Using the remote control

Setting up the TV for the first time - including attaching the stand

Connecting other devices to the Television

Need help setting up or using your TV?

Please contact the UK & ROI Helpline*

Telephone UK 0330 024 0803 or ROI 01443 3323

Online support at: www.umc-uk.co.uk

Email support at: service@umc-uk.co.uk

*Calls to 0330 numbers are charged at standard call rates and are included as part of any bundled minutes with your phone provider. Hours are correct at time of this document being published.
Please note these hours are subject to change periodically.
Calls to the ROI number are charged at the local call rate.

The telephone opening hours are:

Monday to Friday: 8.30am – 6pm

Saturday: 9am – 5pm

Bank Holidays: 10am – 4pm

Closed Christmas and New Years day.



Sky Remote Code

If you wish to use your Sky remote to operate the TV's basic functions, you will need a Sky remote control (Revision 9 or later) and you will need to program it with the code 2134. If you wish to use your Sky Q remote to operate the TV's basic functions, you will need to program it with the code 4170.



- 1** **STANDBY** - Switch on the TV when in standby or vice versa.
FREEVIEW PLAY - Access the Freeview Play app.
(Freeview Play only available in the UK)
- 2** **NUMBER BUTTONS** - 0-9 to select a TV channel directly.
MUTE - Mute the sound or vice versa.
TV GUIDE - Opens the 7 day TV guide (digital TV mode).
- 3** **VOL (+/-)** - To increase/decrease the sound level.
PICTURE - Scrolls through picture mode options.
SOUND - Scrolls through sound mode options.
SOURCE - To display the input/source menu.
CH (+/-) - To increase or decrease the channel being watched.
EXIT - To exit all menus.
MENU - To display OSD menu.
BACK - To go back a previous step.
FAV - To display favourites menu.
- 4** **INFO** - Press once for now/next channel information.
- Press twice for information about the current programme.
TEXT - To enter/exit Text.
SUBTITLE - To switch the dialogue at the bottom of the screen (on/off).
TV - To switch to Digital Channels.
YOUTUBE - Access the Youtube App.
NETFLIX - Access the Netflix App.
APPS - Access the APPS menu.
- To restart the current chapter
- To advance forward to the next chapter
- To stop the playback/Eject Disc
- To EJECT the disc press/hold the **DISC** button for 4 seconds
- To play in fast forward mode
- To play in fast rewind mode
- To stop the playback/pause
RECORD - Access the USB record function.
REC LIST - Opens the list of previously recorded items.
GOTO - To go to a specific chapter.
- Press once to set point, press a second time to return to point.
ANGLE - Select different angle of DVD.
REPEAT - To repeat playback.

Please save your box/package as you will need this in the event of warranty/service repair or support. We are unable to carry out warranty/service if you are unable to package it correctly. The safest way to package your item in the event of warranty/service repair is in its original box/packaging.

Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies. Content owners may require you to upgrade PlayReady to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft.

Microsoft PlayReady™



RF Cable

If you don't have the RF cable shown below, then you can purchase one from www.umc-uk.co.uk/cables or receive Freeview you will need this cable.

Additional Accessories

- 1 x Quick Start Guide
- 1 x Remote Control and 2 x AAA Batteries
- 1 x Safety Leaflet
- 1 x Stand installation pack

Included with this TV are the following accessories

Accessories

What is included in the box

To launch the Online Manual, press the [MENU] button and then select **Settings** > **Setup** > **Help Information**

Online Manual

REMOTE CONTROL


Setting up the TV set for the first time

 
1 Fitting the stand

TV panel must be facing downwards.


For the stand installation, there is one type of screw provided as shown below.

Note: To complete the stand installation you will require a cross head screw driver.


4 x  Used for attaching the stand to the TV set (fig.2)

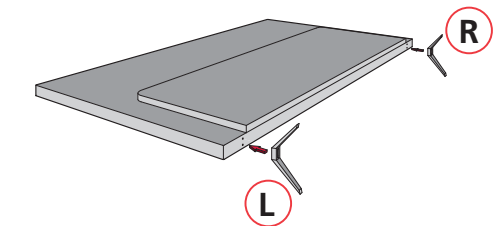

 1 Place the TV set on a flat and clean surface with the panel facing downwards to avoid damage.

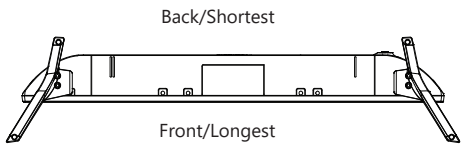


 2 When the stand feet are installed correctly the stand feet will be longest at the front of the TV and shortest at the back with the feet pointing away from each other.

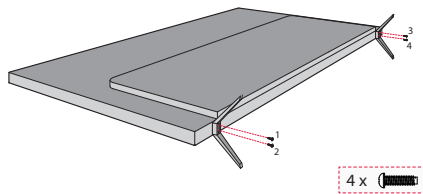

3 When the stand/feet are in the correct position, secure the feet to the underside of the TV set using 4 screws provided.

 
2 Connecting your set

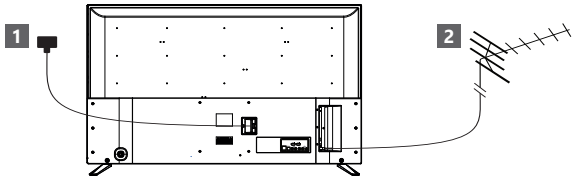

- 1 Connect the TV to your power socket.
- 2 If you wish to use the TV to receive Freeview/Saorview channels, connect the RF input from the TV to your outdoor Digital TV aerial. If you do not wish to receive Freeview/Saorview, skip this step.


3 Powering On the TV

 TV Control Stick

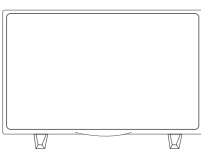

Switch on the television by pressing the TV control stick located on the TV set.

 Remote Control:
Installing Batteries

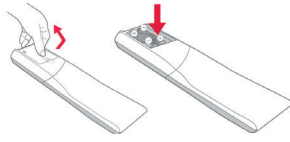

Insert the batteries supplied into the remote control and press the standby button to power on the TV.

Win a SHARP Soundbar

Register your manufacturers guarantee online within 14 days of purchase at www.registertoday.co.uk/sharp and enter into a prize draw to win a Sharp Soundbar

Terms and conditions apply. Online registration only.



Wall Mounting the TV


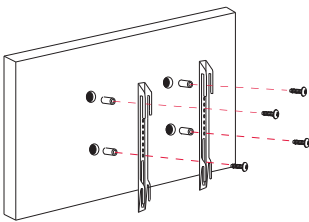 


Image for illustration only. For the dimensions of the VESA mounting, please refer to the Technical Specifications section of this document.

- 1 Remove the four screws that are supplied in the wall mounting holes.
- 2 The wall mount can now be easily attached to the mounting holes on the rear of the TV.
- 3 Install the wall mounting bracket to the television as advised by the bracket manufacturer.


The picture shows the use of spacers, which are not applicable to all sets/installations.

 4 First time installation

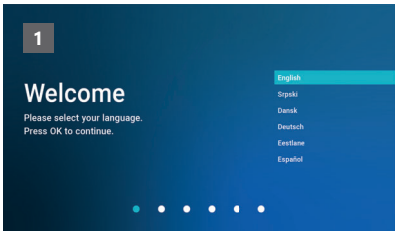


Introduction & Language

 When the set first turns on, it enters the First Time Installation mode. This can be restarted by restoring the set to default settings in the 'About TV' Menu. Select your preferred on-screen display language. This will change the language in which the menus and associated information is displayed in.

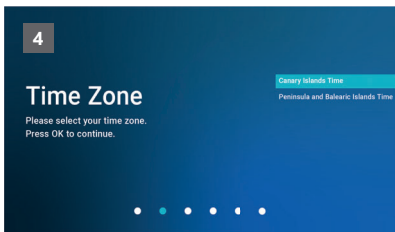


Time Zone

 Set the Time Zone in which the TV will reside. This may be dependent on the country you select in step 2.

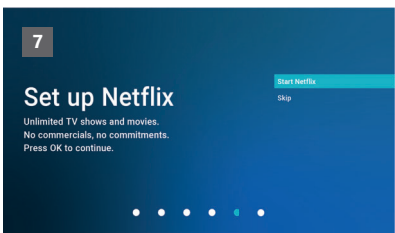


Set up Netflix

 If you have a Netflix account, it can be set up on the television here. Once set up and validated, the First Time Installation returns to the next step.

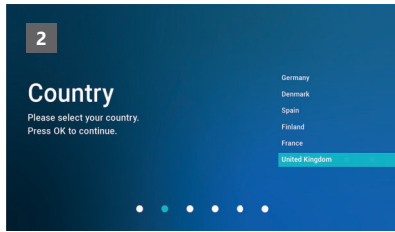

Country

 
Select the correct country in which the set will be used in. This will enable the set to correctly install the functions applicable in the country of use.

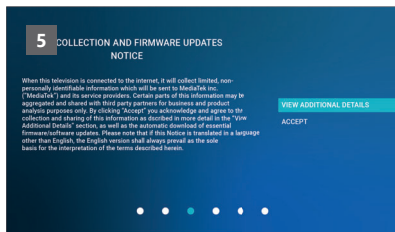

Updates Notice


You will need to agree to certain information collection for the TV set to operate as intended.

 Note: In home mode, the TV will switch off automatically after 4 hours in the event that no buttons are pressed on the TV or remote control.

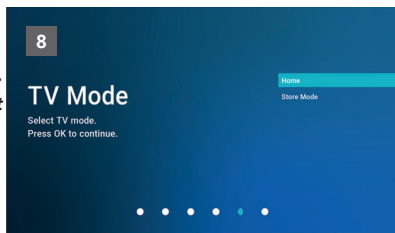


TV Mode

 Home Mode: For normal use, by default it is set to a power saving mode which reduces the energy used by up to 25% (by reducing the power to the LED/LCD panel). This can be changed in the picture mode settings.

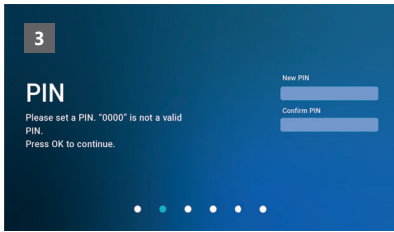


PIN

 This needs to be set to establish parental controls.

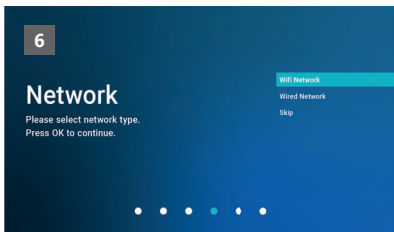

Network Set Up

 You can connect the TV to your broadband router or wireless network in order to take advantage of the Smart functions. If you connect the TV to your router using an Ethernet cable, the Wifi set up will be skipped.

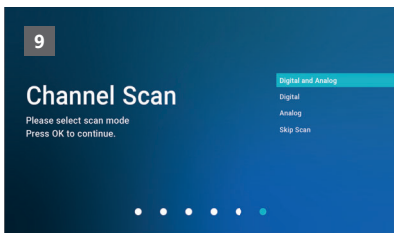


Channel Scan

Choose to install terrestrial channels via Digital or Analog signals.

Note: Analog signals in the United Kingdom have been turned off. Only Digital signals are available.

 Connectivity

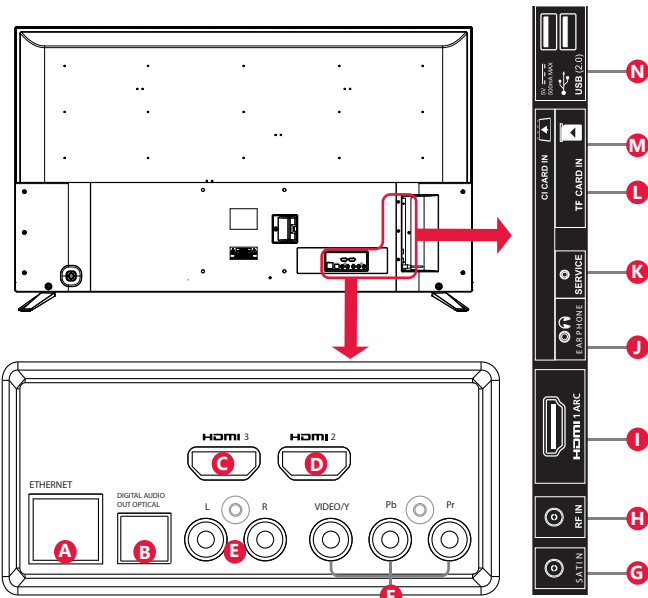

A	Ethernet/LAN*	Network Connection	H	RF In	RF / TV Aerial input
B	Digital Audio	Digital Optical Audio Output	I	HDMI 1 (ARC)	HDMI Input with ARC
C	HDMI 3	HDMI Input	J	Earphones	Earphones Input
D	HDMI 2	HDMI Input	K	Service Input	Input is used only by service centres
E	L/R	Audio shared for video/Composite and component/YpBPr	L	CI Card In	Common Interface Module
F	Video/YpBPr	Video Input (green) and HD input (YpBpr)	M	TF Card In	Micro SD Card Input
G	SAT In	Satellite Input	N	USB 2.0	USB 2.0 input x2