



Technical Specification

	40CI1KA 40CI7KA
Energy Efficiency Class (SDR)	F
Power consumption (SDR)	45 W
Screen resolution (pixels)	1920 x 1080
Screen Size (diagonal)	101 cm / 40 inches
RF	75 ohm Antenna • Analog • DVB • Satellite
Inputs	3 x HDMI • 2 x USB • 1 x RJ45 LAN/Ethernet • 1 x CVBS/Video input • 1 x Mini Component/YPbPr input • 1 x L/R Audio input for Composite/CVBS & Component/YPbPr
Sound Outputs	1 x Digital Optical Audio output • 1 x 3.5mm Headphone
Speaker*/ Amplifier Watts (RMS)	2 x 10 / 2 x 8
Voltage and power consumption	AC 220V ~ 240V; 50Hz 45/65/80W (home mode/standard/max) (<0.5W in Standby)
Dimensions including stand (mm)	906W x 550H x 199D
Net weight (Kgs)	6.8
Wall Mounting	VESA 200 X 200 (mm)

*Built-in Harman Kardon speaker systems (Full-range speaker and tweeter).

SOUND SYSTEM BY
harman/kardon

Harman Kardon is trademark of HARMAN International Industries, Incorporated, registered in the United States and/or other countries.

HDMI

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

androidtv

Google, Google Play, YouTube, Android TV and other marks are trademarks of Google LLC.

Dolby Audio

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

DTS-HD

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS, Inc. (for companies headquartered in the U.S./Japan/Taiwan) or under license from DTS Licensing Limited (for all other companies). DTS, DTS-HD Master Audio, DTS-HD, VirtualX, and the DTS-HD logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2021 DTS, Inc. ALL RIGHTS RESERVED.

SHARP

androidtv

Quick Start Set Up Guide

For information on using the TV's features, please refer to the Operating Instructions. (Available online to download.)

Model Numbers

40CI1KA
40CI7KA

Register your manufacturers guarantee online within 14 days of purchase at www.registertoday.co.uk/sharp and enter into a prize draw to...

Win a SHARP Soundbar

Terms and conditions apply. Online registration only.



Quick & easy guide for setting up your TV

- What is included in the box
- Using the remote control
- Setting up the TV for the first time - including attaching the stand
- Connecting other devices to the Television

Need help setting up or using your TV?

Please contact the UK & ROI Helpline*
Telephone UK 0330 024 0803 or ROI 01443 3323
Online support at: www.umc-uk.co.uk
Email support at: service@umc-uk.co.uk

*Calls to 0330 numbers are charged at standard call rates and are included as part of any bundled minutes with your phone provider. Hours are correct at time of this document being published.
Please note these hours are subject to change periodically.
Calls to the ROI number are charged at the local call rate.

The helpline telephone opening hours are:
Monday - Friday: 8.30am – 6pm

For Saturdays and Bank Holidays, please refer to the website for our opening hours.



1. **STANDBY** - Switch on the TV when in standby or vice versa.

2. **SOURCE** - To display the input/source menu.

3. **NUMBER BUTTONS** - 0-9 to select a TV channel directly.

4. **MUTE** - Mute the sound or vice versa.

5. **GUIDE** - Opens the 7 day TV guide (Digital TV mode).

6. **MENU** - Displays LIVE TV menu.

7. **Google Assistant** - Use your voice to access entertainment, control.

8. **INFO** - Press once for programme information.

9. **▲/▼/▶/◀/OK** - Allows you to navigate the on-screen menus and adjust settings to your preference.

10. **BACK** - Step back in the menu.

11. **HOME** - Displays the TV's Home Menu

12. **EXIT** - Exits all menus.

13. **VOL (+/-)** - Tilt to increase/decrease the sound level in the sequence.

14. **CH (+/-)** - Tilt to switch to the next/previous channel in the sequence.

15. **NETFLIX** - Access the YouTube App.

16. **PRIME VIDEO** - Access the Prime Video App.

17. **YOUTUBE** - Access the YouTube App.

18. **FREEVIEW PLAY** - Access the Freeview Play service. Only available in the UK.

19. **AUDIO** - Opens the audio track menu.

20. **SUB** - Turns on/off subtitles at the bottom of the screen.

21. **TEXT** - Turns teletext on/off.

22. **TV** - Switches the TV to the last watched input.

23. **MI** - Play/Pause media.

24. **▶▶** - Play in fast forward mode.

25. **◀◀** - Play in fast rewind mode.

26. **◀** - Stop playback

27. **COLOUR BUTTONS** - Execute corresponding function at that time.

1. **STANDBY** - Switch on the TV when in standby or vice versa.

2. **SOURCE** - To display the input/source menu.

3. **NUMBER BUTTONS** - 0-9 to select a TV channel directly.

4. **MUTE** - Mute the sound or vice versa.

5. **GUIDE** - Opens the 7 day TV guide (Digital TV mode).

6. **MENU** - Displays LIVE TV menu.

7. **Google Assistant** - Use your voice to access entertainment, control.

8. **INFO** - Press once for programme information.

9. **▲/▼/▶/◀/OK** - Allows you to navigate the on-screen menus and adjust settings to your preference.


10. **BACK** - Step back in the menu.

11. **HOME** - Displays the TV's Home Menu

12. **EXIT** - Exits all menus.

13. **VOL (+/-)** - Tilt to increase/decrease the sound level in the sequence.

14. **CH (+/-)** - Tilt to switch to the next/previous channel in the sequence.

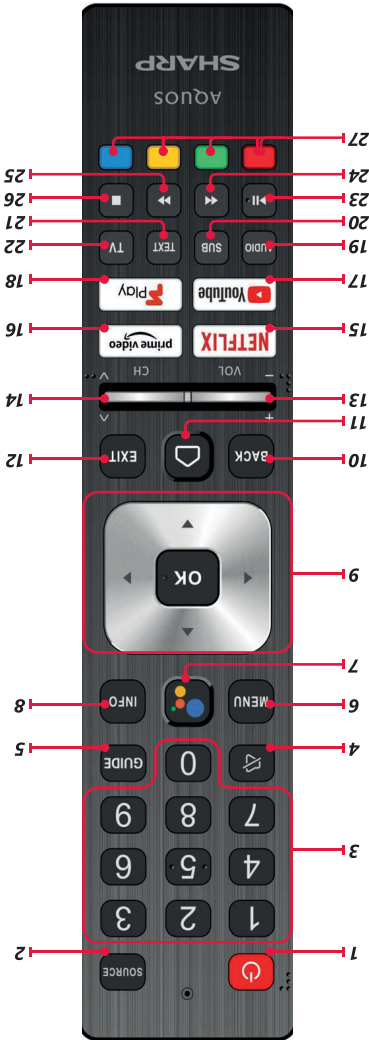

Using the remote control

To launch the online manual, press the HOME button, select Apps from the Home menu, and select "E-Instruction Manual" from the apps list.

Online Manual

What is included in the box

Should you wish to connect older/analogue devices to your television, you can purchase the necessary cables either from your retailer or at www.umc-uk.co.uk/cables

Additional Accessories

- 1 x Quick Start Guide
- 1 x Remote Control and 2 x AAA Batteries
- 1 x Safety Leaflet

RF Cable



Mini YPbPr Cable

Required if you wish to connect a device with YPbPr/Component output to the TV's Mini YPbPr input



Microsoft PlayReady™

This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft. Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies. Content owners may require you to upgrade PlayReady to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

Freeview Play brings together live TV viewing with "catch up" TV services such as BBC iPlayer, ITV player, More4 and Demand 5. The Freeview Play Explore app features a carousel of genres to select from when searching for programmes, such as sport, comedy, dramas and soaps, etc. Content is made up from recommendations of the major broadcasters and offers an alternative means of searching.

Note that to use the full functionality of Freeview Play your set must be connected to the internet.

Sky Remote Code



If you wish to use your Sky remote to operate the TV's basic functions, you will need a Sky remote control (Revision 9 or later) and you will need to program it with the code 2134. If you wish to use your Sky Q remote to operate the TV's basic functions, you will need to program it with the code

Please save your box/packaging as you will need this in the event of warranty/service repair or support. We are unable to carry out warranty/service if you are unable to package it correctly. The safest way to package your item in the event of warranty/service repair is in its original box/packaging.

