

Technical Specification

Product fiche

Trademark	Sharp
Model ID	50BL2KA 50BL3KA 50BL4KA 50BL5KA
Energy efficiency class	A+
Visible screen size (diagonal)	126cm / 50 inches
On-mode power consumption	70 W
Annual energy consumption *1	102 kWh
Standby power consumption *2	<0.50 W
Off mode power consumption	n/a
Screen resolution	3840 (H) x 2160 (V)
*1: Energy consumption XYZ kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.	
*2: When the TV is turned off with the remote control/standby button and no function is active.	

	50BL2KA 50BL3KA 50BL4KA 50BL5KA
RF	75 ohm Antenna / Analog / DVB / Satellite
Inputs	4 x HDMI, 2 x USB, 1 x micro USB, 1x micro SD card reader, 1 x RJ45 LAN/Ethernet, 1 x Composite/CVBS Video & Component/YPbPr Input, 1 x L/R Audio input for Composite/CVBS & Component YPbPr
Sound Outputs	1 x Digital Optical Audio output, 1 x 3.5mm Headphone
Speaker*/ Amplifier Watts (RMS)	2 x 10 / 2 x 8
Voltage and power consumption	AC 220V ~ 240V; 50Hz 70/95/115W (home mode/standard/max) (<0.5W in Standby)
Dimensions including stand (mm)	1125W x 697H x 233D
Net weight (Kgs)	12.2
Wall Mounting	VESA 200 x 200 (mm)

Built-in **Harman Kardon speaker systems (Full-range speaker and tweeter).

SOUND SYSTEM BY
harman/kardon
Harman Kardon is trademark of HARMAN International Industries, Incorporated, registered in the United States and/or other countries.

HDMI
The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

androidtv
Google, Google Play, YouTube, Android TV and other marks are trademarks of Google LLC.

SHARP
androidtv

Quick Start Set Up Guide

For information on using the TV's features, please refer to the Operating Instructions. (Available online to download.)

Model Numbers

50BL2KA

50BL3KA

50BL4KA

50BL5KA

Register your manufacturers guarantee online within 14 days of purchase at

www.registertoday.co.uk/sharp and enter into a prize draw to

Win a
SHARP
Soundbar



Terms and conditions apply. Online registration only.

Quick & easy guide for setting up your TV

What is included in the box

Using the remote control

Setting up the TV for the first time - including attaching the stand

Connecting other devices to the Television

Need help setting up or using your TV?

Please contact the UK & ROI Helpline*

Telephone UK 0330 024 0803 or ROI 01443 3323

Online support at: www.umc-uk.co.uk

Email support at: service@umc-uk.co.uk

*Calls to 0330 numbers are charged at standard call rates and are included as part of any bundled minutes with your phone provider.

Calls to the ROI number are charged at the local call rate.

The telephone opening hours are Monday to Friday 8.30am to 6pm, Saturday 9am – 5pm.

Bank Holidays - 10am to 4pm

Closed Christmas and New Years day



Sky Remote Code

If you wish to use your Sky remote to operate the TV's basic functions, you will need a Sky remote control (Revision 9 or later) and you will need to program it with the code 2134. If you wish to use your Sky Q remote to operate the TV's basic functions, you will need to program it with the code 4170.



- 1** **STANDBY** - Switch on the TV when in standby or vice versa. By long pressing of this button, the set will display a menu offering power down option to energy saving standby mode.

2 **NUMBER BUTTONS** - 0-9 to select a TV channel directly.

3 **VOL (+/-)** - To increase/decrease the sound level.

4 **NETFLIX** - Access the Netflix App.
- 1** **TV GUIDE** - Opens the 7 day TV guide (digital TV mode).

2 **MUTE** - Mute the sound or vice versa.

3 **THE GOOGLE ASSISTANT** - Use your voice to access entertainment, control smart devices, obtain answers on screen, and more.

4 **NETFLIX** - Access the Netflix App.
- 1** **EXIT** - To exit all menus.

2 **BACK** - To go back a previous step.

3 **INFO** - Press once for now/next channel information.

4 **NETFLIX** - Access the Netflix App.
- 1** **COLOUR BUTTONS** - Execute corresponding function at that time

2 **TEXT** - To enter/exit teletext.

3 **FREEVIEW PLAY** - Access the Freeview Play app.

4 **NETFLIX** - Access the Netflix App.

Please save your box/packaging as you will need this in the event of warranty/service repair or support. We are unable to carry out warranty/service if you are unable to package it correctly. The safest way to package your item in the event of warranty/service repair is in its original box/packaging.

Freeview Play

To receive Freeview channels, in particular Freeview HD channels, you will need a Digital TV aerial and be in a good Freeview coverage area.

You can check coverage for your postcode at www.freeview.co.uk.

Please note that any Freeview HD channels found during tuning will be placed in channel positions above 100. For example, 101 (BBC1 HD) 102 (BBC2 HD) etc.

Freeview Play

Freeview Play brings together live TV viewing with "catch up" TV services such as BBC iPlayer, ITV Player, More4 and Demand 5. The Freeview Play Explore app features a carousel of genres to select from when searching for programmes, such as sport, comedy, dramas and soaps, etc. Content is made up from recommendations of the major broadcasters and offers an alternative means of searching.

Note that to use the full functionality of Freeview Play your set must be connected to the internet.

This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft. Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies. Content owners may require you to upgrade PlayReady to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.



RF Cable

Should you wish to connect older/digital/analogue devices to your television, you can purchase the necessary cables either from your retailer or at www.umc-uk.co.uk/cables

Additional Accessories

- 1 x Quick Start Guide
- 1 x Remote Control and 2 x AAA Batteries
- 1 x Safety Leaflet
- 1 x Stand installation pack

Included with this TV are the following accessories

Accessories

What is included in the box

To launch the online manual, press the HOME button, select Apps from the Home menu, and select "E-instruction Manual" from the apps list.

Online Manual

Using the remote control

Setting up the TV set for the first time

1 Fitting the stand

 
The TV panel must be facing downwards.

For the stand installation, there is one type of screw provided as shown below.

Note: To complete the stand installation you will require a cross head screw driver.




2 Connecting your set

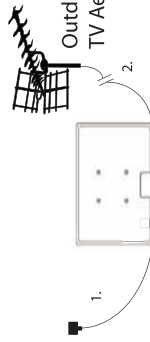


- 1) Connect the TV to your power socket.
- 2) If you wish to use the TV to receive Freeview/Saorview channels, connect the RF input from the TV to your outdoor Digital TV aerial. If you do not wish to receive Freeview/Saorview, skip this step.
- 3) Connect to the internet. Ethernet provides the most stable connection.

4 First time installation

 Basic installation steps are shown below. These may vary slightly by procedure and subsequent menus can be subject to change.

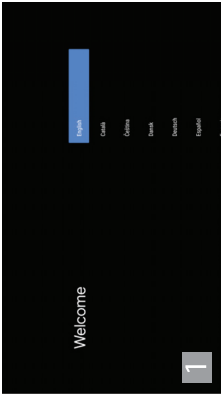

 
When the set first turns on, it will ask you to select your preferred on-screen display language. This will change the language in which the menus and associated information is displayed in.

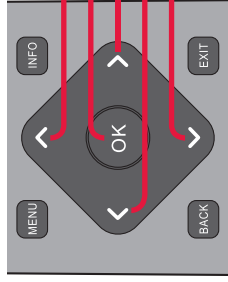

5 Pairing the remote


If during the first time installation process the remote was not paired or skipped, then follow the process below to pair your remote with the television.

 - 1) Turn the set on.
- 2) Press the  button on the remote control.
- 3) The LED indicator on the remote will illuminate and the pairing screen will appear on the TV.
- 4) Now press and hold the "Left" and "Home" buttons on the remote simultaneously.

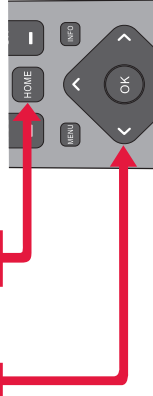


- 5) The LED indicator on the remote control will start to flash.
- 6) Select the detected remote control shown on the screen and press OK.
- 7) Once paired the pairing screen will disappear.

 This process will only need to be carried out if the remote is not paired. Once paired, when the button is pressed it will open the Google Assistant screen on the set and activate voice functionality.

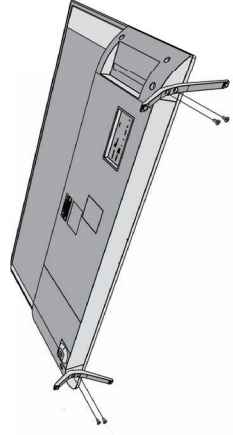


3

 When the stand/feet are in the correct position, secure the feet to the underside of the TV set using 4 screws provided.

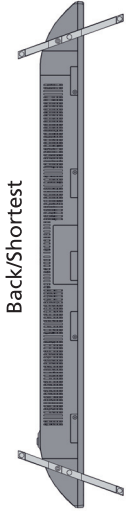


2

 When the stand feet are installed correctly the stand feet will be longest at the front of the TV and shortest at the back with the feet pointing away from each other.

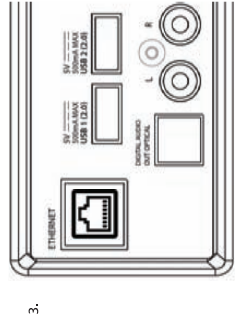


3 Powering On the TV

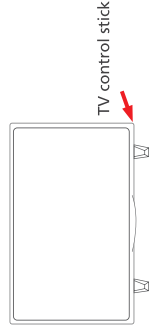 

Switch on the television by pressing the TV control stick located on the TV set.

 Remote Control: Installing Batterie

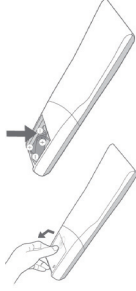

Insert the batteries supplied into the remote control and press the standby button to power on the TV.

 
Win a **SHARP** Soundbar



Register your manufacturers
guarantee online within
14 days of purchase at
www.registertoday.co.uk/sharp
and enter into a prize draw to
win a Sharp Soundbar

Terms and conditions apply. Online registration only.

Wall Mounting the TV

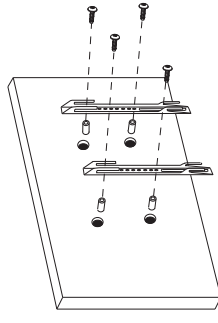


 
- 1) Remove the four screws that are supplied in the wall mounting holes.
- 2) The wall mount can now be easily attached to the mounting holes on the rear of the TV.
- 3) Install the wall mounting bracket to the television as advised by the bracket manufacturer.

Image for illustration only.

For the dimensions of the VESA mounting, please refer to the Technical Specifications section of this document.

The picture shows the use of spacers, which are not applicable to all sets/installations.

 Connectivity

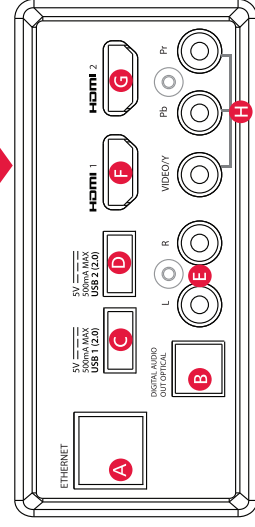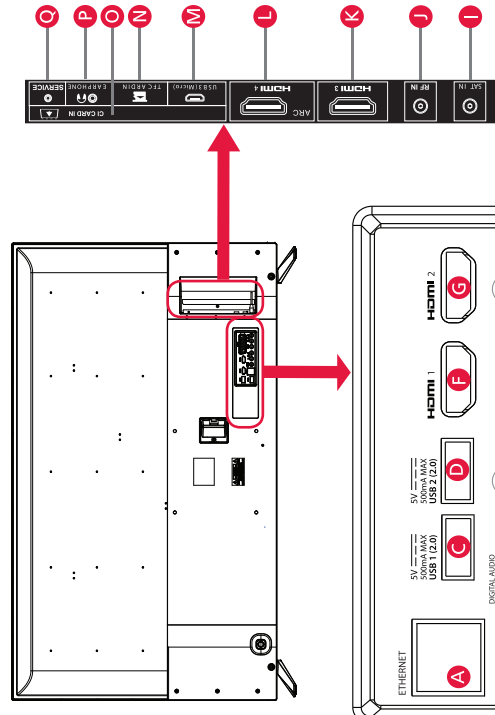

A	Ethernet/LAN*	Network connection	I	SAT IN	Satellite input
B	Digital Audio	Digital Optical Audio Output	J	RF IN	RF /TV aerial input
C	USB 1	USB port 2.0	K	HDMI 3	HDMI input
D	USB 2	USB port 2.0	L	HDMI 4	HDMI input (ARC)
E	U/R	Audio shared for Video/Composite and Component/YpBPr	M	USB 3 (micro)	Micro USB cable input
F	HDMI 1	HDMI input	N	Tf Card in	TransFlash / micro SD Card input
G	HDMI 2	HDMI input	O	CI Card in	Common Interface module
H	Video/YpBPr	Video input (green) and HD input (YpBPr)	P	Earphones	Earphone output
			Q	Service Input	Input is used only by service centres

* The Ethernet/LAN port is used for Freeview HD services and smart functions.