



Technical Specification

Product fiche

Trademark	Sharp
Model ID	65BN2KA 65BN3KA 65BN4KA 65BN5KA
Energy efficiency class	A+
Visible screen size (diagonal)	164 cm / 65 inches
On-mode power consumption	118.0 W
Annual energy consumption *1	172 kWh
Standby power consumption *2	<0.50 W
Off mode power consumption	n/a
Screen resolution	3840 (H) x 2160 (V)
*1: Energy consumption XYZ kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used. *2: When the TV is turned off with the remote control/standby button and no function is active.	

	65BN2KA 65BN3KA 65BN4KA 65BN5KA
RF	75 ohm Antenna / Analog / DVB / Satellite
Inputs	3 x HDMI, 3 x USB, 1 x SD card reader, 1 x RJ45 LAN/Ethernet, 1 x Mini Component/YpBPr Input, 1 x Mini AV IN - Composite Video/CVBS and L/R Audio shared for Composite Video and Component/YpBPr
Sound Outputs	1 x Digital Optical Audio output, 1 x 3.5mm Headphone
Speaker**/ Amplifier Watts (RMS)	2 x 10W + 15W subwoofer
Voltage and power consumption	AC 220V ~ 240V; 50Hz 118/155/180W (home mode/standard/max) (<0.5W in Standby)
Dimensions including stand (mm)	1462W x 898H x 282D
Net weight (Kgs)	21
Wall Mounting	VESA 600 x 300 (mm)

Built-in **Harman Kardon speaker systems (Full-range speaker and tweeter).

SOUND SYSTEM BY
harman/kardon

Harman Kardon is trademark of
HARMAN International Industries,
Incorporated, registered in the
United States and/or other
countries.

HDMI

The terms HDMI, HDMI High-
Definition Multimedia Interface,
and the HDMI Logo are trademarks
or registered trademarks of HDMI
Licensing Administrator, Inc.

androidtv

Google, Google Play, YouTube,
Android TV and other marks are
trademarks of Google LLC.

Dolby
VISION-ATMOS

Manufactured under license from Dolby
Laboratories. Dolby, Dolby Vision, Dolby Atmos,
and the double-D symbol are registered
trademarks of Dolby Laboratories Licensing
Corporation.

SHARP

androidtv

Quick Start Set Up Guide

For information on using the TV's features, please refer to the Operating Instructions. (Available online to download.)

Model Numbers

65BN2KA

65BN3KA

65BN4KA

65BN5KA

Register your manufacturers guarantee online within 14 days of purchase at

www.registertoday.co.uk/sharp and enter into a prize draw to



Quick & easy guide for setting up your TV

What is included in the box

Using the remote control

Setting up the TV for the first time - including attaching the stand

Connecting other devices to the Television

Need help setting up or using your TV?

Please contact the UK & ROI Helpline*

Telephone UK 0330 024 0803 or ROI 01443 3323

Online support at: www.umc-uk.co.uk

Email support at: service@umc-uk.co.uk

*Calls to 0330 numbers are charged at standard call rates and are included as part of any bundled minutes with your phone provider.

Calls to the ROI number are charged at the local call rate.

The telephone opening hours are:

Monday to Friday 8.30am to 6pm.

Saturday 9am – 5pm.

Bank Holidays - 10am to 4pm.

Closed Christmas and New Years day



Please save your box/packaging as you will need this in the event of warranty/service repair or support. We are unable to carry out warranty/service if you are unable to package it correctly. The safest way to package your item in the event of warranty/service repair is in its original box/packaging.

Freeview Play brings together live TV viewing with "catch up" TV services such as BBC iPlayer, More4 and Demand 5. The Freeview Play Explore app features a carousel of genres to select from when searching for programmes, such as sport, comedy, dramas and soaps, etc. Content is made up from recommendations of the major broadcasters and offers an alternative means of searching.

Note that to use the full functionality of Freeview Play your set must be connected to the internet.

To receive Freeview channels, in particular Freeview HD channels, you will need a Digital TV aerial and be in a good Freeview coverage area. You can check coverage for your postcode at www.freeview.co.uk.

Please note that any Freeview HD channels found during tuning will be placed in channel positions above 100. For example, 101 (BBC1 HD) 102 (BBC2 HD) etc.

This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft. Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies. Content owners may require you to upgrade PlayReady to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

Microsoft PlayReady™



RF Cable

If you don't have the RF cable shown below, then you can purchase one from www.umc-uk.co.uk/cables or if you are intending to connect your TV to an RF socket in order to receive Freeview, you will need this cable.

Additional Accessories

- 1 x Quick Start Guide
- 1 x Remote Control and 2 x AAA Batteries
- 1 x Safety Leaflet
- 1 x Stand installation pack

Included with this TV are the following accessories

Accessories

What is included in the box

To launch the online manual, press the HOME button, select Apps from the Home menu, and select "E-instruction Manual" from the apps list.

Online Manual

Using the remote control



If you wish to use your Sky remote to operate the TV's basic functions, you will need a Sky remote control (Revision 9 or later) and you will need to program it with the code 2134. If you wish to use your Sky Q remote to operate the TV's basic functions, you will need to program it with the code 4170.

Sky Remote Code



- 1** **STANDBY** - Switch on the TV when in standby or vice versa. By long pressing of this button, the set will display a menu offering power down option to energy saving standby mode.
- 2** **SOURCE** - To display the input/source menu.
- 3** **NUMBER BUTTONS** - 0-9 to select a TV channel directly.
- 4** **MUTE** - Mute the sound or vice versa.
- 5** **TV GUIDE** - Opens the 7 day TV guide (digital TV mode).
- 6** **VOL (+/-)** - To increase/decrease the sound level.
- 7** **The Google Assistant** - Use your voice to access entertainment, control smart devices, obtain answers on screen, and more.
- 8** **HOME** - Display the TV Home Menu.
- 9** **CH (+/-)** - To increase or decrease the channel being watched.
- 10** **MENU** - Display LIVE TV menu. This button works only in sources (TV, HDMI, Component, etc.). It will not work in the Home Menu.
- 11** **INFO** - Press once for now/next channel information.
- 12** **BACK** - To go back a previous step.
- 13** **EXIT** - To exit all menus.
- 14** **NETFLIX** - Access the Netflix App.
- 15** **Prime video** - Access the Prime video App.
- 16** **YouTube** - Access the YouTube App.
- 17** **Freeview Play** - Access the Freeview Play app.
- 18** **MTS** - Opens audio track menu.
- 19** **TEXT** - To enter/exit teletext.
- 20** **SUB** - To switch the dialogue at the bottom of the screen (on/off).
- 21** **TV** - To switch to Live TV.
- 22** **MI** - To play/pause media.
- 23** **Fast Forward** - To play in fast forward mode.
- 24** **Stop** - To stop the playback.
- 25** **COLOUR BUTTONS** - Execute corresponding function at that time.

