



	42EL2KA 42EL4KA 42EL6KA 42EL7KA	43EL2KA 43EL4KA 43EL6KA 43EL7KA	50EL2KA 50EL4KA 50EL6KA 50EL7KA	55EL2KA 55EL4KA 55EL6KA 55EL7KA
Energy Efficiency Class (SDR)	G			
Power consumption (SDR)	61 W	52 W	69 W	81 W
Energy Efficiency Class (HDR)	G			
Power consumption (HDR)	74W	71 W	105 W	130 W
Screen resolution (pixels)	3840 x 2160			
Screen Size (diagonal)	106 cm / 42 inches	108 cm / 43 inches	126 cm / 50 inches	139 cm / 55 inches
RF	75 ohm Antenna / Analog / DVB / Satellite			
Inputs	4 x HDMI, 2 x USB, 1x micro SD card reader, 1 x RJ45 LAN/Ethernet, 1x Composite/CVBS + Audio input			
Sound Outputs	1 x Digital Optical Audio output, 1 x 3.5mm Headphone			
Speaker*/ Amplifier Watts (RMS)	2 x 10			
Voltage and power consumption	AC 220V ~ 240V; 50Hz 61/75/95W (home mode/ standard/max) (<0.5W in Standby)	AC 220V ~ 240V; 50Hz 52/71/92W (home mode/ standard/max) (<0.5W in Standby)	AC 220V ~ 240V; 50Hz 69/95/115W (home mode/ standard/max) (<0.5W in Standby)	AC 220V ~ 240V; 50Hz 81/135/160W (home mode/ standard/max) (<0.5W in Standby)
Dimensions including stand (mm)	953W x 579H x 188D	968W x 605H x 188D	1125W x 697H x 233D	1240W x 766H x 233D
Net weight (Kgs)	6.7	7.4	12.2	13.7
Wall Mounting	VESA 200 x 200 (mm)			VESA 400 x 200 (mm)

SOUND SYSTEM BY
harman/kardon

Harman Kardon is trademark of HARMAN International Industries, Incorporated, registered in the United States and/or other countries.

androidtv

Google, Google Play, YouTube, Android TV and other marks are trademarks of Google LLC.

dts x.

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS, Inc. (for companies headquartered in the U.S./Japan/Taiwan) or under license from DTS Licensing Limited (for all other companies). DTS, DTS:X, VirtualX, and the DTS:X logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2021 DTS, Inc. ALL RIGHTS RESERVED.

Dolby Vision

Dolby, Dolby Vision, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 1992–2021 Dolby Laboratories. All rights reserved.

Terms and conditions apply. Online registration only



The diagram shows a Sharp AQUOS remote control with the following numbered callouts:

- 1: Power button (red)
- 2: Source button
- 3: Numeric keypad (0-9)
- 4: Mute button (speaker with slash)
- 5: Guide button
- 6: Menu button
- 7: Home button (house icon)
- 8: Info button
- 9: Directional pad (Up, Down, Left, Right) and OK button
- 10: Back button
- 11: Volume Up/Down buttons (VOLUME +/-)
- 12: Exit button
- 13: Channel Up/Down buttons (CH +/-)
- 14: Playback controls (Play, Pause, Stop, Fast Forward, Rewind)
- 15: Netflix button
- 16: Prime Video button
- 17: YouTube button
- 18: Play button (red)
- 19: Audio Subtitles button (AUDIO SUBS)
- 20: Subtitles button (SUBS)
- 21: Text button (TEXT)
- 22: TV button (TV)
- 23: Previous/Next buttons (◀ ▶)
- 24: Stop button (■)
- 25: Color buttons (Blue, Yellow, Green, Red)
- 26: Sharp AQUOS logo
- 27: Sharp AQUOS logo

Online Manual

Accessories

Included with this TV are the following accessories

1 x Quick Start Guide	1 x Safety Leaflet
1 x Remote Control and 2 x AAA Batteries	1 x Stand installation pack

If you don't have the RF cable shown below, then you can purchase one from www.umc-uk.co.uk/cables. If you are intending to connect your TV to an RF socket in order to receive Freeview you will need this cable.

RF Cable



Microsoft PlayReady™

Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies. Content owners may choose to upgrade PlayReady to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

Freeview Play brings together live TV viewing with "catch up" TV services such as BBC iPlayer, ITV player, More4 and Demand 5. The Freeview Play Explore app features a carousel of genres to select from when searching for programmes, such as sport, comedy, dramas and soaps, etc. Content is made up from recommendations of the major broadcasters and offers an alternative means of searching.

Note that to use the full functionality of Freeview Play your set must be connected to the internet.

If you wish to use your Sky remote to operate the TV's basic functions, you will need a Sky remote control (Revision 9 or later) and you will need to program it with the code 2134. If you wish to use your Sky Q remote to operate the TV's basic functions, you will need to program it with the code 4170.



Please save your box/packaging as you will need this in the event of warranty/service repair or support. We are unable to carry out warranty/service if you are unable to package it correctly. The safest way to package your item in the event of warranty/service repair is in it's original box/packaging.




Setting up the TV set for the first time


1 Fitting the stand

The TV panel must be facing downwards.

For the stand installation, there is one type of screw provided as shown below.

Note: To complete the stand installation you will require a cross head screw driver.

4 x  Used for attaching the stand to the TV set (fig.2)

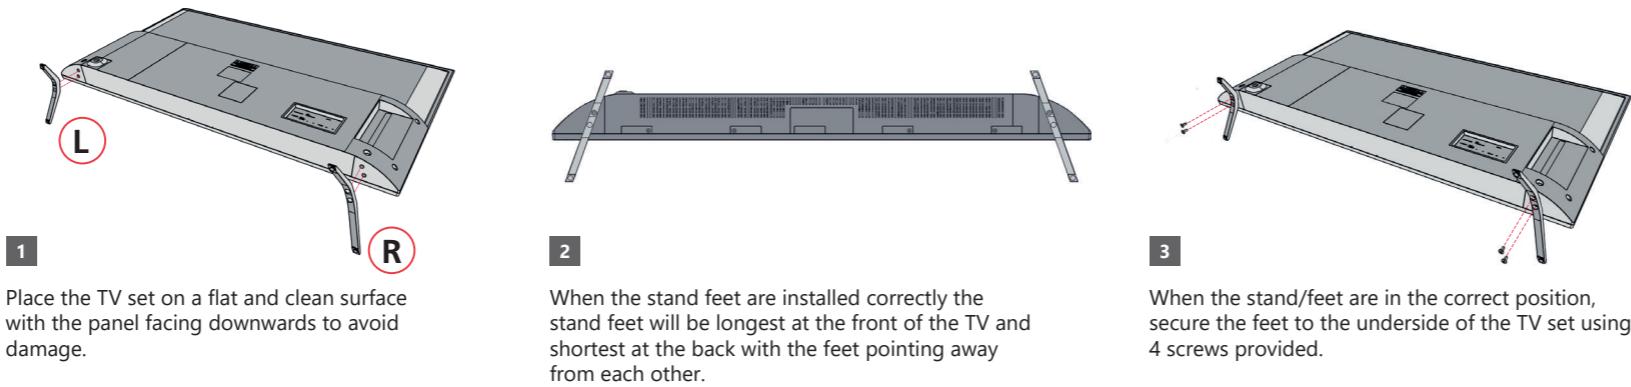


Win a SHARP Soundbar

Register your manufacturers guarantee online within 14 days of purchase at www.registertoday.co.uk/sharp and enter into a prize draw to win a Sharp Soundbar


Terms and conditions apply. Online registration only.




2 Connecting your set

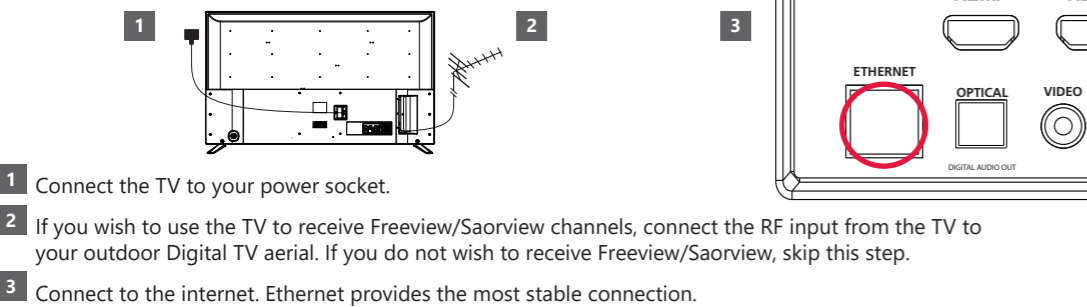


3 Powering On the TV

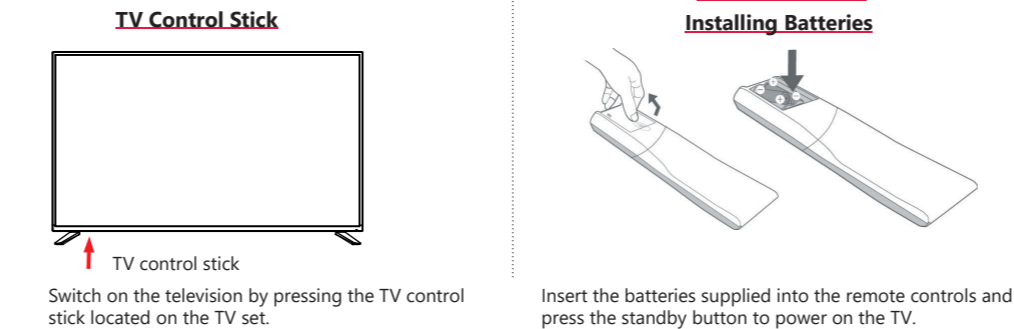


Wall Mounting the TV

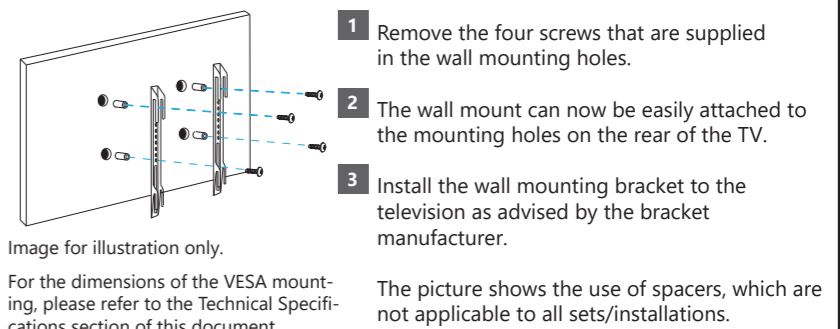

4 First time installation

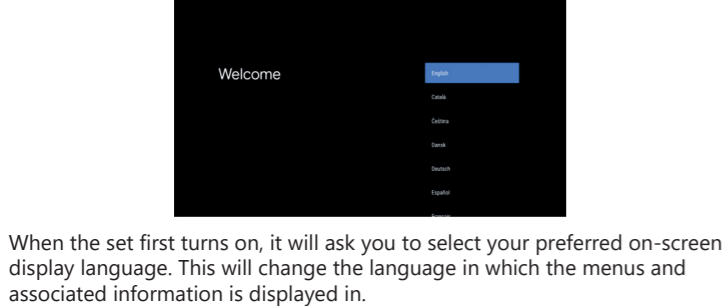


When the set first turns on, it will ask you to select your preferred on-screen display language. This will change the language in which the menus and associated information is displayed in.

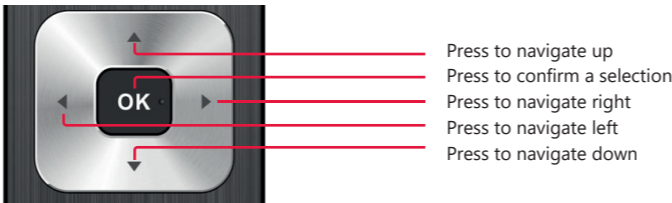

Android Phone users
During the set-up process, you will be prompted to sign-in to your Google account using your pre-installed "Google" app. This set up process will depend upon which model TV you are setting up. Please ensure you have your account details to hand.


5 Pairing the remote

If during the first time installation process the remote was not paired or skipped, then follow the process below to pair your remote with the television.

- 1 Turn the set on.
- 2 Press the  button on the remote control.
- 3 The pairing screen will appear on the TV.
- 4 Now press and hold the "Left" and "Home" buttons on the remote simultaneously (highlighted).




- 5 The LED indicator on the remote control will start to flash.
- 6 Select the detected remote control shown on the screen and press OK.
- 7 Once paired the pairing screen will disappear.

This process will only need to be carried out if the remote is not paired. Once paired, when the  button is pressed it will open the Google Assistant screen on the set and activate voice functionality.


6 The Google Assistant



Using the Google Assistant with your voice

- Remote controls with the Google Assistant have a Google Assistant dedicated button and a built-in microphone. To use this feature with the Google Assistant remote control, follow the instructions as below.
- 1 Before using the Google Assistant, you will need to pair the remote. Please follow step 5 of this guide to pair your remote to enable the Google Assistant.
 - 2 Press the  button. The LED indicator on the remote control will illuminate.
 - 3 Wait for the on-screen message from the Google Assistant, then speak into the microphone. A good rule of thumb is to have the microphone positioned about 15-30 centimetres away from your mouth.
- By speaking into the microphone, you can search for various content or control your connected smart home devices. Speech examples may be displayed on the television screen depending on your model.

Connectivity

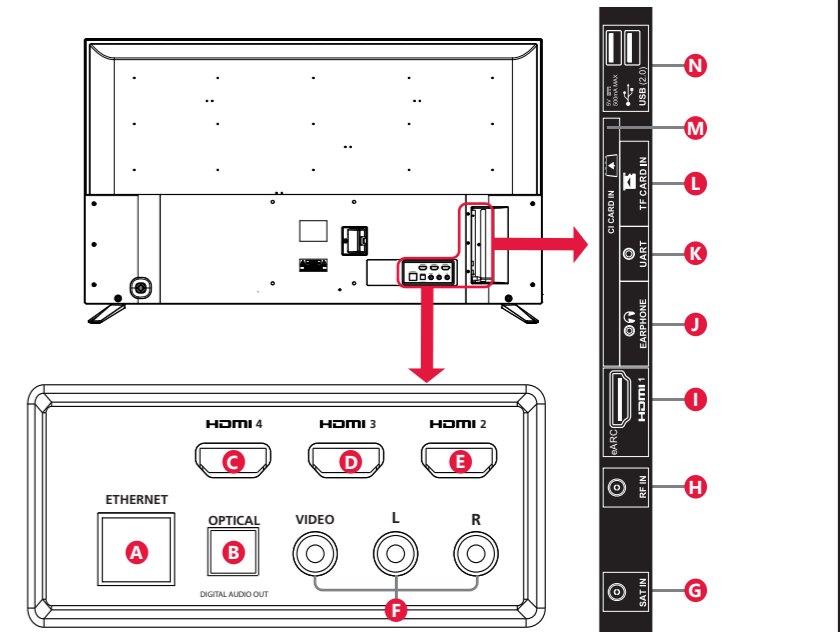

A	Ethernet/LAN*	Network connection	H	RF in	RF / TV aerial input
B	Digital Audio	Digital Optical Audio Output	I	HDMI 1	HDMI input (eARC)
C	HDMI 4	HDMI input	J	Earphones	Earphone input
D	HDMI 3	HDMI input	K	Service Input	Input is used only by service centres
E	HDMI 2	HDMI input	L	SD	SD card input
F	Video / L+R	Composite/CVBS Video + Audio Input	M	CI card in	Slot for Conditional Access Module (CAM)
G	SAT IN	Satellite input	N	USB	USB port 2.0 x2