

Technical Specification

Trademark		Sharp
Model ID		LC-40FG2241KF LC-40FG5241KF LC-40FG5242KF LC-40FG5341KF LC-40FG5342KF
Energy efficiency class		A+
Visible screen size (diagonal)		102 cm / 40 inches
On-mode power consumption		45.0 W
Annual energy consumption *1		66 kWh
Standby power consumption *2		<0.50 W
Off mode power consumption		n/a
Screen resolution		1920 (H) x 1080 (V)
*1: Energy consumption XYZ kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used. *2: When the TV is turned off with the remote control/standby button and no function is active.		
		LC-40FG2241KF LC-40FG5241KF LC-40FG5242KF LC-40FG5341KF LC-40FG5342KF
RF		75 ohm Antenna / Analog / DVB / Satellite *
Inputs		3 x HDMI, 2 x USB, 1 x SCART, 1 x RJ45 LAN/Ethernet, 1 x Mini Component/YPbPr, 1 x Mini AV IN - Composite Video/CVBS and L/R Audio shared for Composite Video and Component/YPbPr, 1 x VGA/PC, 1 x 3.5mm jack for PC audio input
Sound Outputs		1 x Digital Optical Audio output, 1 x 3.5mm Headphone
Speaker** / Amplifier Watts (RMS)		2 x 10 / 2 x 8
Voltage and power consumption		AC 220V ~ 240V; 50Hz 45/65/80W (home mode/standard/max) (<0.5W in Standby)
Dimensions including stand (mm)		921W x 576H x 199D
Net weight (Kgs)		8.0
Wall Mounting		VESA 200 x 300 (mm)

*The satellite input is for the LC-40FG5242KF and LC-40FG5342KF models only.
Built-in **Harman Kardon speaker systems (Full-range speaker and tweeter).
SOUND SYSTEM BY
harman / kardon
Harman Kardon is trademark of HARMAN International Industries, Incorporated, registered in the United States and/or other countries.

SHARP

Quick Start Set Up Guide

For information on using the TV's features, please refer to the operating Instructions.

Model Numbers
LC-40FG2241KF

LC-40FG5241KF

LC-40FG5242KF

LC-40FG5341KF

LC-40FG5342KF

Register your manufacturers guarantee online within 14 days of purchase at www.registertoday.co.uk/sharp and enter into a prize draw to

Win a

SHARP

Soundbar

Terms and conditions apply. Online registration only.



Quick & easy guide for setting up your TV

- What is included in the box
- Using the remote control
- Setting up the TV for the first time - including attaching the stand
- Connecting other devices to the Television

Need help setting up or using your TV?

Please contact the UK & ROI Helpline*
Telephone UK 0330 024 0803 or ROI 01443 3323
Online support at: www.umc-uk.co.uk
Email support at: service@umc-uk.co.uk

*Calls to 0330 numbers are charged at standard call rates and are included as part of any bundled minutes with your phone provider.
Calls to the ROI number are charged at the local call rate.
The telephone opening hours are Monday to Friday 8.30am to 6pm, Saturday 9am – 5pm.
Bank Holidays - 10am to 4pm

Closed Christmas and New Years day

 


Please save your box/packaging as you will need this in the event of warranty/service repair or support. We are unable to carry out warranty/service if you are unable to package it correctly. The safest way to package your item in the event of warranty/service repair is in it's original box/packaging.

1. Plug

2. Accessories pack

Both the plug and accessories pack must be placed at the rear of the TV.

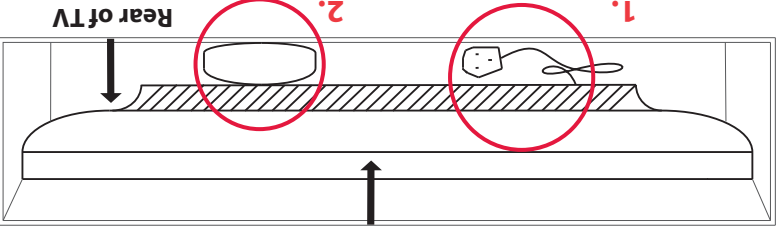

1) Remove the stand/feet from the TV.

2) Put all of the accessories that came with the TV in the box ensuring they are placed at the back of the TV. (not near the screen/panel side) Note: In the event of warranty/service support, you do not need to send the accessories/stand/feet.

3) Ensure the power cable / plug is located at the back of the TV (not on the screen/panel side)

4) Never put anything in the box on the screen/panel side of the TV as it's likely to damage it.

Please take the following steps:

The best way to package it is in the original box.

If you need help setting up your TV or you require any technical support, in the first instance please contact the helpline.
In the unlikely event you need to return the product to the store/retailer from where it was purchased or you need warranty/service support, please ensure you package the item adequately in order that it does not get damaged.

Re-packing the Television

Freeview Play brings together live TV viewing with "catch up" TV services such as BBC iPlayer, ITV player, More4 and Demand 5. The Freeview Play Explore app features a carousel of genres to select from when searching for programmes, such as sport, comedy, dramas and soaps, etc. Content is made up from recommendations of the major broadcasters and offers an alternative means of searching.
Note that to use the full functionality of Freeview Play your set must be connected to the internet.

To receive Freeview channels, in particular Freeview HD channels, you will need a Digital TV aerial and be in a good Freeview coverage area.
You can check coverage for your postcode at www.freeview.co.uk.
Please note that any Freeview HD channels found during tuning will be placed in channel positions above 100. For example, 101 (BBC1 HD) 102 (BBC2 HD) etc.

Using the remote control



1

STANDBY - Switch on the TV when in standby or vice versa.

2

FREEVIEW PLAY - Access the Freeview Play app.

3

NUMBER BUTTONS - 0-9 to select a TV channel directly.
MUTE - Mute the sound or vice versa.
TV GUIDE - Opens the 7 day TV guide (digital TV mode).

4

VOL (+/-) - To increase/decrease the sound level.
PICTURE - Scrolls through picture mode options.
SOUND - Scrolls through sound mode options.
SOURCE - To display the input/source menu.
CH (+/-) - To increase or decrease the channel being watched.
MENU - To display OSD menu.
EXIT - To exit all menus.
(▲/▼/◀/▶) (OK) - Allows you to navigate the on-screen menus and adjust the system settings to your preference.
BACK - To go back a previous step.
FAV - To display favourites menu.

5

INFO - Press once for now/next channel information.
- Press twice for information about the current programme.
TEXT - To enter/exit Text.
SUBTITLE - To switch the dialogue at the bottom of the screen (on/off).
TV - To switch to Digital Channels.
YOUTUBE - Access the Youtube App.
NETFLIX - Access the Netflix App.
APPS - Access the APPS menu.
RECORD - Access the USB record function.
REC LIST - Opens the list of previously recorded items.
- To restart the current chapter
- To advance forward to the next chapter
- To stop the playback/Eject Disc
- To EJECT the disc press/hold the button for 4 seconds
- To play in fast rewind mode
- To play in fast forward mode
- To play/pause
GOTO - To go to a specific chapter.
A-B - Press once to set point, press a second time to return to point.
ANGLE/3D - Select different angle of DVD.
REPEAT - To repeat playback.

Key

For models with integrated DVD players.

For models with PVR Function.

For models with USB Playback.

For models with 3D functions.

Sky Remote Code
If you wish to use your Sky remote to operate the TV's basic functions, you will need a Sky remote control (Revision 9 or later) and you will need to program it with the code 2134. If you wish to use your Sky Q remote to operate the TV's basic functions, you will need to program it with the code 4170.

Setting up the TV set for the first time

What is included in the box

 
 
- 1 x Operating Instructions
- 1 x Quick start guide
- 1 x TV
- 1 x RF cable
- 1 x Remote Control
- 2 x AAA Batteries
- 1 x Mini composite / AV cable
- 1 x Mini component / YPbPr cable
- 1 x Stand installation pack
- 1 x Power cable

1 Fitting the stand


TV panel must be facing downwards.

For the stand installation, there is one type of screw provided as shown below.


To complete the stand installation you will require a cross head screw driver. Place the TV set on a flat and clean surface with the panel facing downwards to avoid damage.

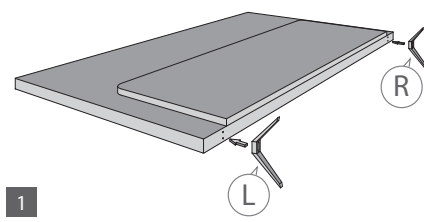

 Place the TV set on a flat and clean surface with the panel facing downwards to avoid damage.

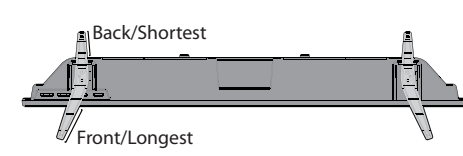


 When the stand feet are installed correctly the stand feet will be longest at the front of the TV and shortest at the back with the feet pointing away from each other.

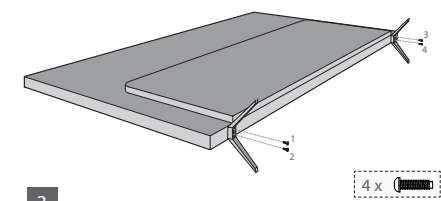

When the stand/feet are in the correct position, secure the feet to the underside of the TV set using 4 screws provided.

 
2 Connecting your set

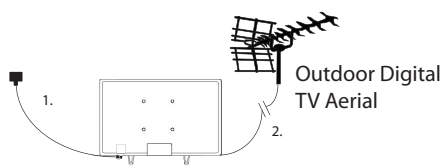

- 1) Connect the TV to your power socket.
- 2) If you wish to use the TV to receive Freeview/Saorview channels, connect the RF input from the TV to your outdoor Digital TV aerial. If you do not wish to receive Freeview/Saorview, skip this step.


3 Powering On the TV

 TV Control Stick

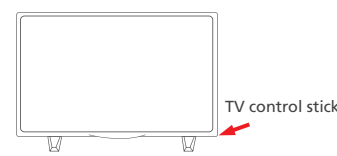

Switch on the television by pressing the TV control stick located on the TV set.

 Remote Control: Installing Batteries

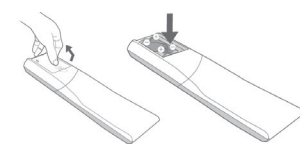

Insert the batteries supplied into the remote control and press the standby button to power on the TV.

4 First time installation



 
1. Languages

Select your preferred on screen display language. This will change the language in which the menus and associated information is displayed in. When set up has been completed, this can be changed by selecting Menu > Settings > Language




2. Country Selection

Select the correct flag for the country in which the set will be used in. This will enable the set to correctly install the functions applicable in the country of use.

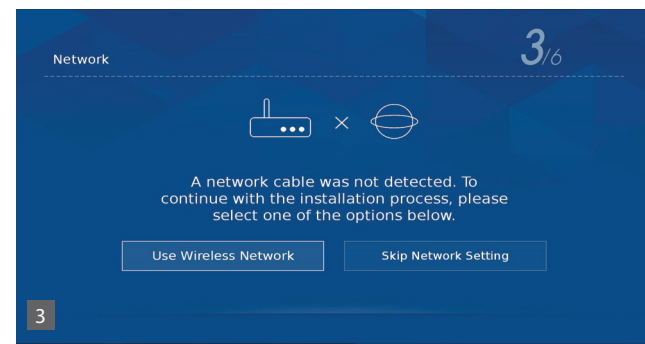

3. Network setup

 You can connect the TV to your broadband router or wireless network in order to take advantage of the Smart functions. If you connect the TV to your router using an Ethernet cable (recommended) this step will be skipped. Follow the on screen prompts to connect to your wireless network. You can set up the Network connection later in the network menu.

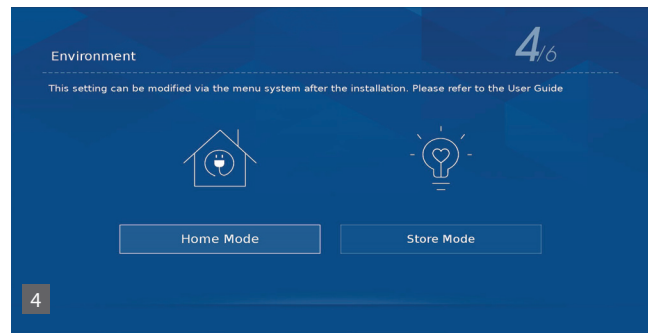


4. Environment of Use

Home Mode: For normal use, by default it is set to a power saving mode which reduces the energy used by up to 25% (by reducing the power to the LED/LCD panel). This can be changed in the picture mode settings.


NOTE: In Home Mode, the TV will switch itself to the standby mode after 4 hours in the event that the buttons on the remote control or TV set are not used.

 Store Mode: For store display use. The picture is adjusted to optimum settings. The store demonstration will appear on the screen automatically after two minutes.

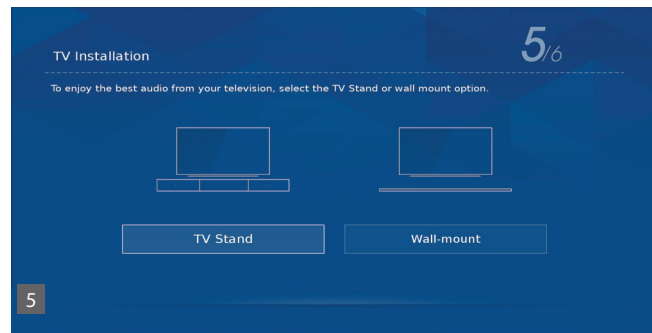

5. TV Installation – Audio.

 Depending on how you use / install your TV, select the appropriate setting. The sound settings on the TV will adjust to suit the type of installation.

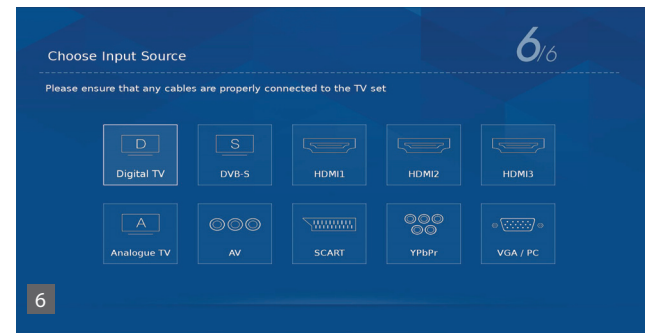

6. Default Source

Select the source which you use the most. If Digital TV (Freeview) is chosen, then at the next step, the set will tune in and default to Digital TV (Freeview). If one of the other sources is selected, then the set will not tune in at this stage and default to that input. If it is required to tune the set in later, this can be achieved by selecting Menu > Channels

 
Win a SHARP Soundbar

Register your manufacturers guarantee online within 14 days of purchase at www.registertoday.co.uk/sharp and enter into a prize draw to win a Sharp Soundbar

Terms and conditions apply. Online registration only.



Connectivity

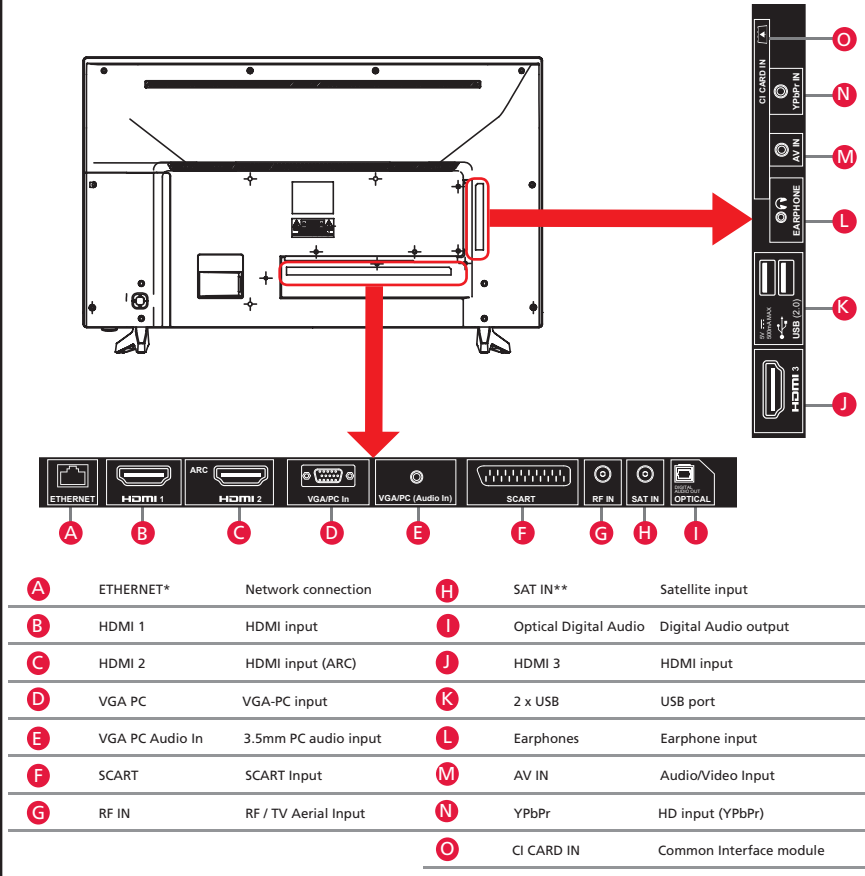

* The Ethernet/LAN port is used for Freeview HD services and smart functions.
**The satellite input is for the LC-40FG5242KF and LC-40FG5342KF models only.